


This guide provides guidance on the safe and effective installation and operation wall mounted RESS batteries (5KWH ,10KWH) which use 48100-5G-B0 version BMS . It also provides information on how to safely connect multiple batteries in parallel (Max. 15), as well as how to charge and discharge the batteries.


CAUTION

- Due to the regulations governing the transportation of Lithium Ion cells and batteries internationally. The battery is only 50% SOC during transport. Please charge battery fully in the first use.
- Before connecting any electrical cable, turn OFF all the switches and breakers and turn OFF the batteries by press the ON/OFF button.
- Avoid any fall or collision during the installation process.
- Do not remove the battery components. The maintenance of the battery should be carried out by a professional engineer.
- Do not expose the Li-ion battery to heat in excess of 55°C during operation, 60 °C in storage.

System Introduction

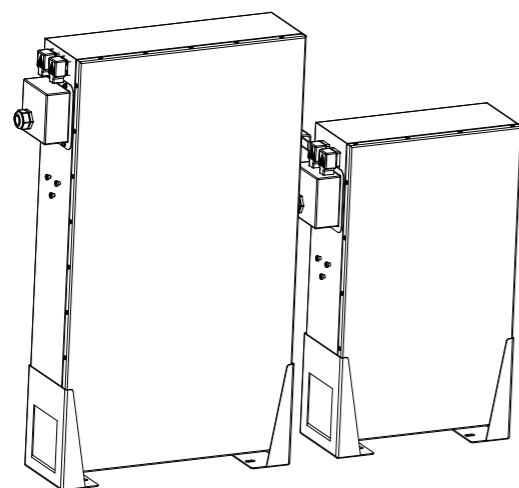

RESS-10KWH-51.2V RESS-5KWH-51.2V

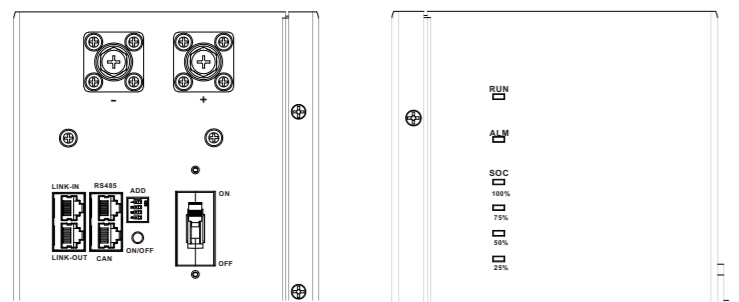


Power output, COM port, Breaker

SOC, RUN, ALARM indicators

1 Unpacking Inspection


- Unpack the battery and visually inspect the appearance. If any shipping damage is found, notify the carrier immediately.
- Press ON/OFF button to active the battery, the SOC and RUN indicator will be light. turn on MCB to measure the output voltage by multimeter, For parallel application, the voltage difference should less than 500mV.
- Press ON/OFF button to shutdown the battery, the indicator light will turn off.
- Check the accessories which should include:

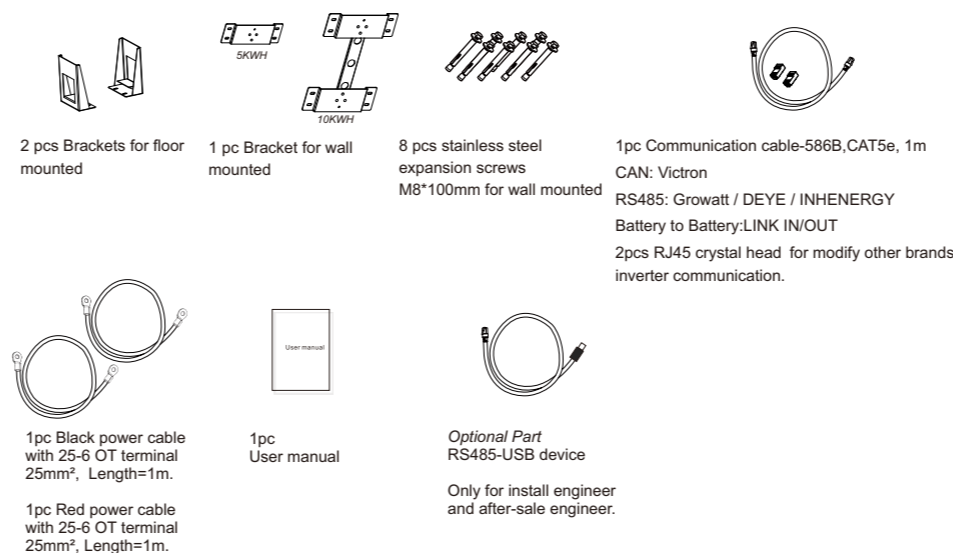


2 Mechanical Installation

2.1. Wall mounted

2.1.1. Install the floor mount brackets.

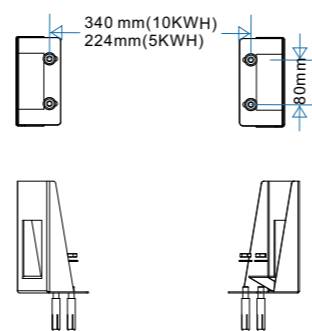


2.1.2. Put the battery into floor mount brackets.

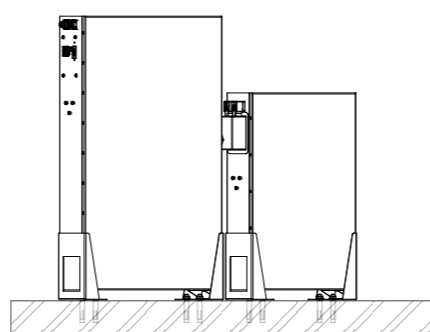


2.2. Floor mounted

2.2.1. Install the wall mount brackets.

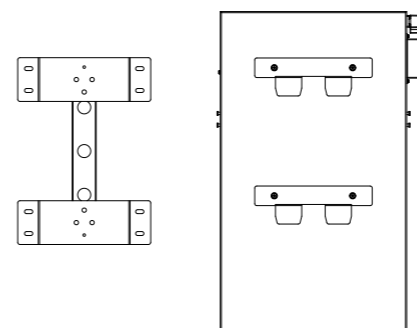


2.2.2. Install the battery.

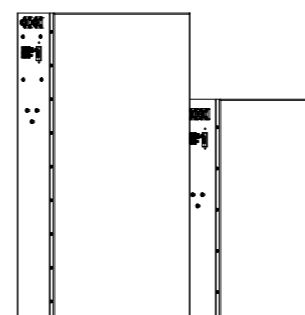


3 Connecting Cables

3.1. For 3~5KVA inverter or load less than 5KW, refer to below cable connection.

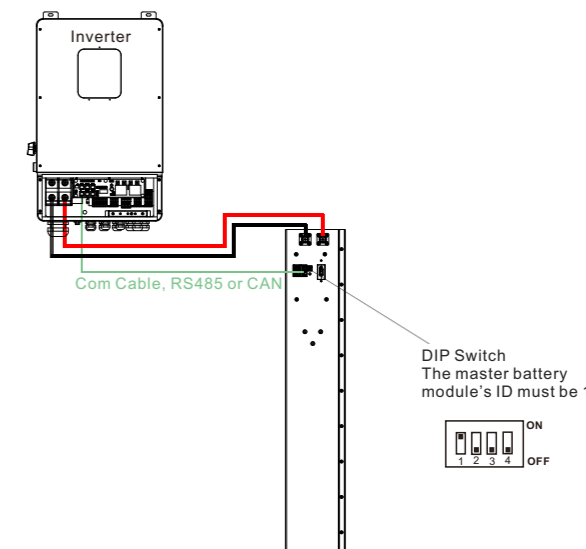

3.2. For 5KVA and above capacity inverter or multi batteries in parallel , refer to below cable connection.

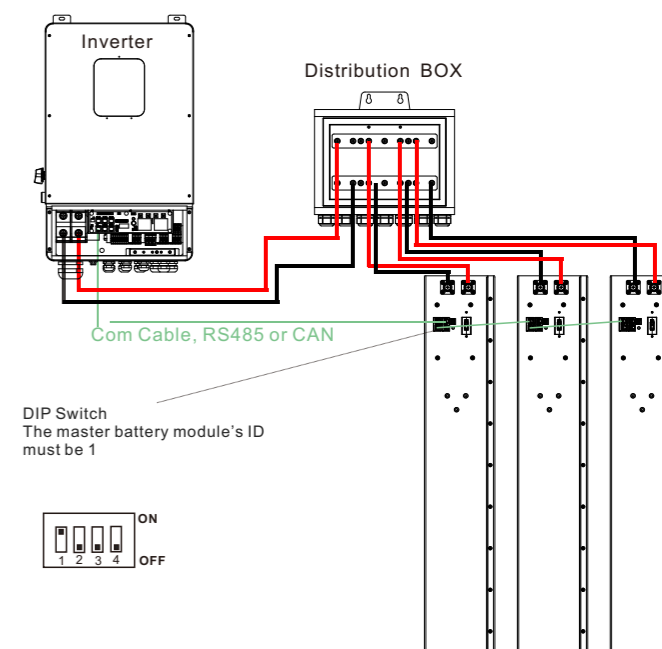

Note :

- The power cable to every battery should be same size and length.
- The communication cable connection and modification refer to user manual.

RS485 PIN MAP



| RJ45 PIN | Description |
|-------------|-------------|
| 1 | RS485_B |
| 2 | RS485_A |
| 3,4,5,6,7,8 | NC |

CAN PIN MAP



| RJ45 PIN | Description |
|-------------|-------------|
| 1,2,3,4,5,6 | NC |
| 7 | CAN_H |
| 8 | CAN_L |

LINK-IN/OUT PIN MAP



| RJ45 PIN | Description |
|-------------|-------------|
| 1,2,3,4,5,6 | NC |
| 7 | RS485-2_A |
| 8 | RS485-2_B |

- Step 1. Make sure all batteries are turned off and the breaker is in off condition. Connect the internal power cable and output power cable. Make sure the screws are tight.
- Step 2. Connect the communication cable.
- Step 3. Set the battery module ID by ADD. **The master battery which do communication with inverter ADD must be 1.** Change others battery ID from 2~...
- Step 4. Make sure the inverter had be installed correctly.
- Step 5. **Turn on all batteries breaker and then press the master battery's ON/OFF button to active the battery.** the slave modules will be activated automatic.
- Step6. **Charge the batteries fully in first use.**